



4-point temp check

With system operating in cool mode take temperature reading at the large and small lines at the indoor and outdoor units. You should have less than 4° difference between indoor and outdoor on the same line. If more than 4° there is a restriction in the circuit

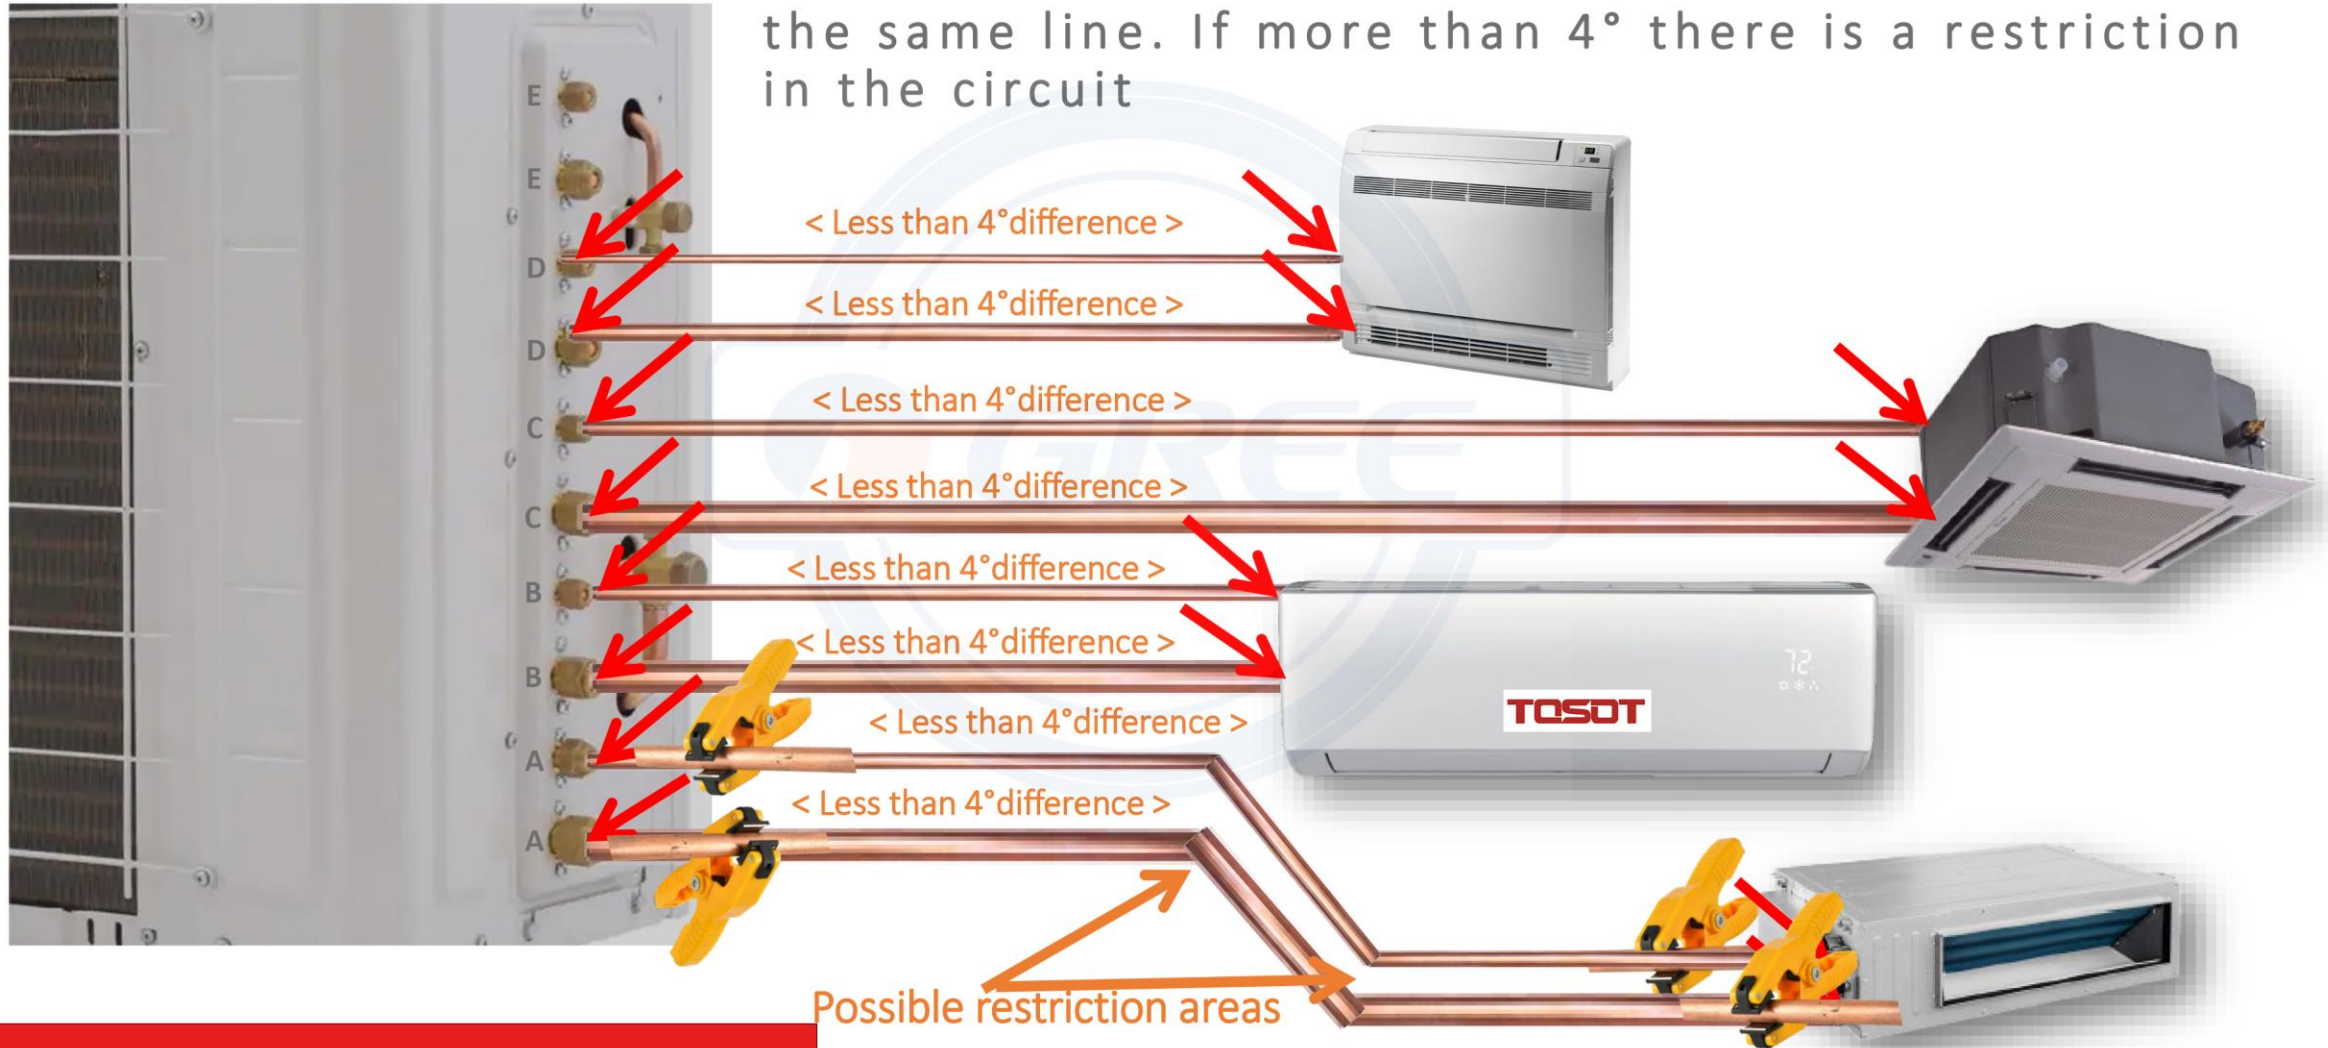

4-point temp check

Temp on the indoor should be taken as close to the indoor coil as possible. (yes, this means you need to take the Indoor cover off)

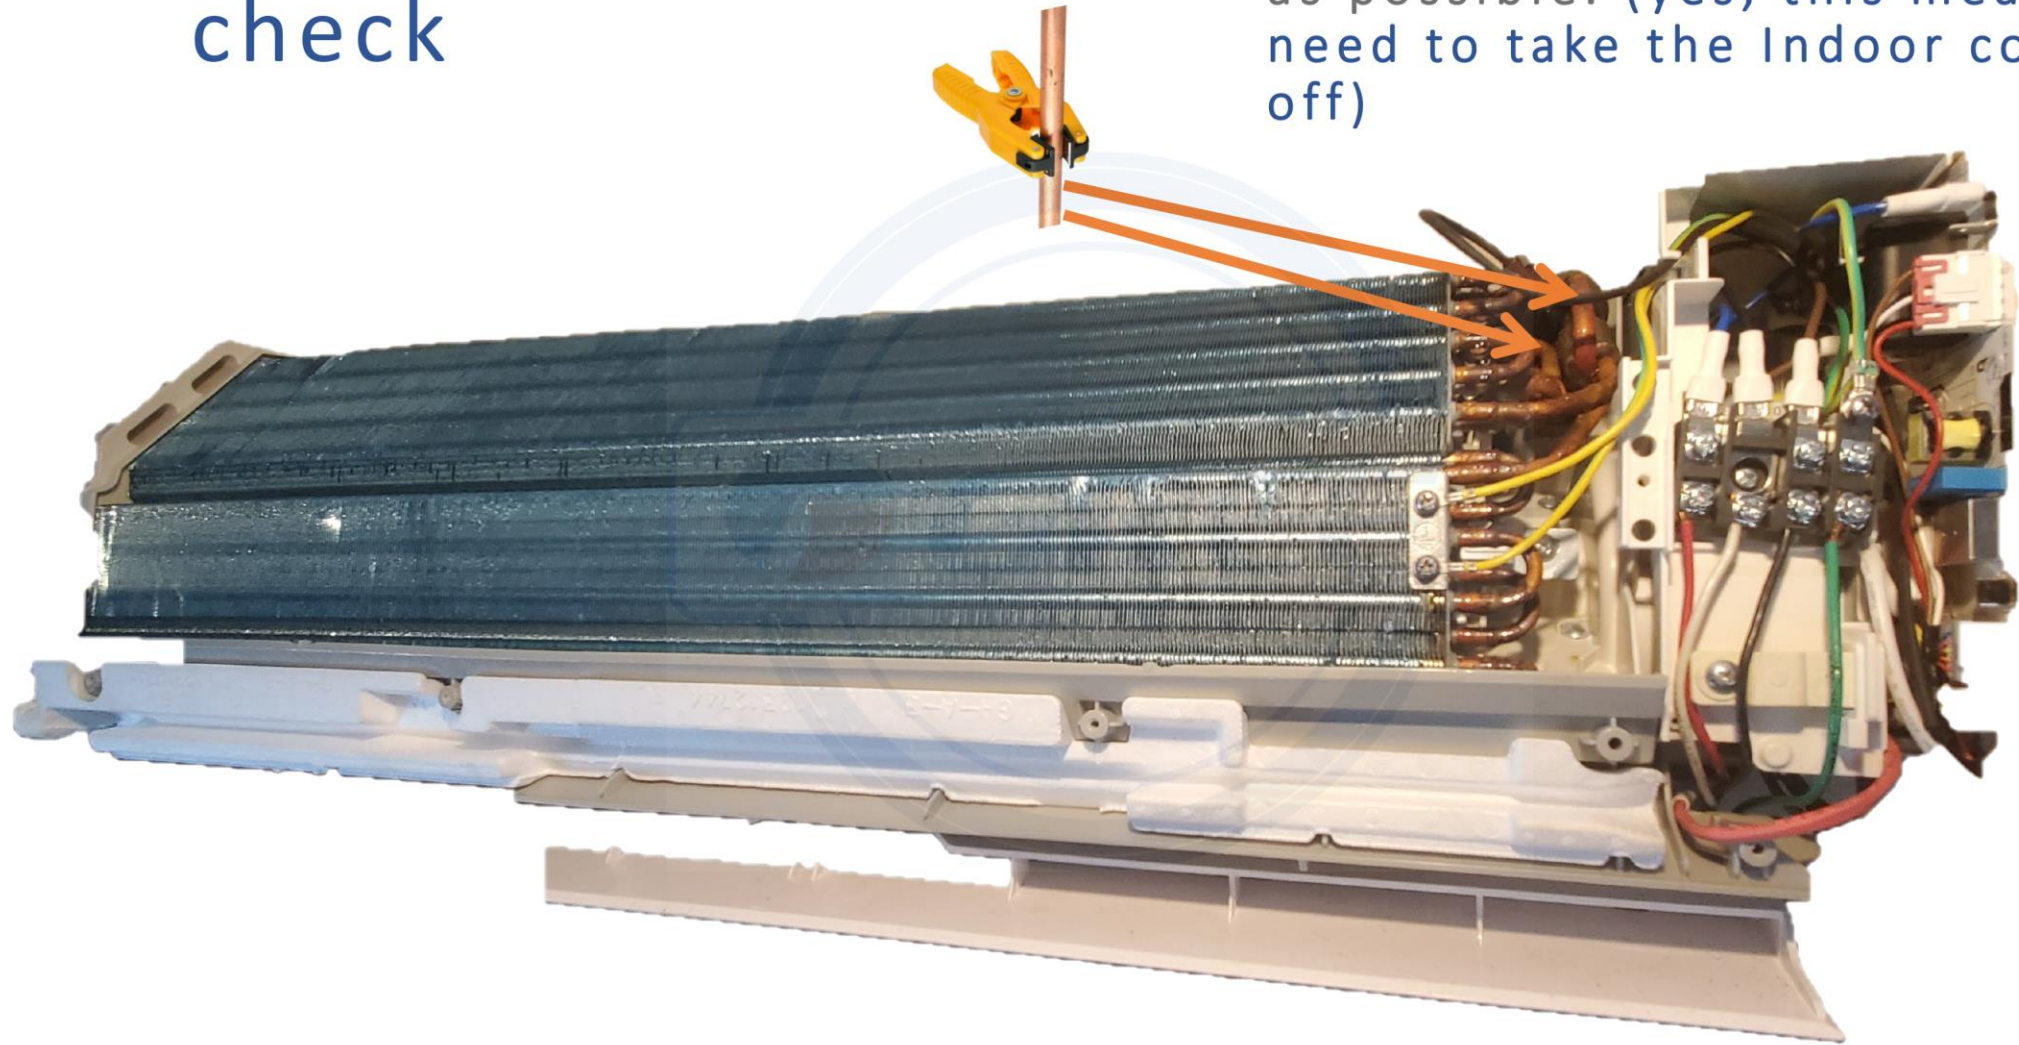

4-point temp check

Temp on the indoor should be taken as close to the indoor coil as possible. (yes, this means you need to take the Indoor cover off)

Possible restriction areas at indoor unit (viewed from back)

